


Sublight drilling-template

Ø6,5 is for M6 bolts. Remember to use the shoulderwashers, to prevent the metals touching. Only predrill a small hole when using screws. The 9,5mm in the middle is required for making space for the strain relief on the cable.

Apply glue between lamp and mounting-surface before fastening.

DOUBLECHECK THAT THE MEASUREMENTS ON THE DRAWINGS ARE CORRECT
Printouts are not always 100% correct in the dimensions due to scaling.

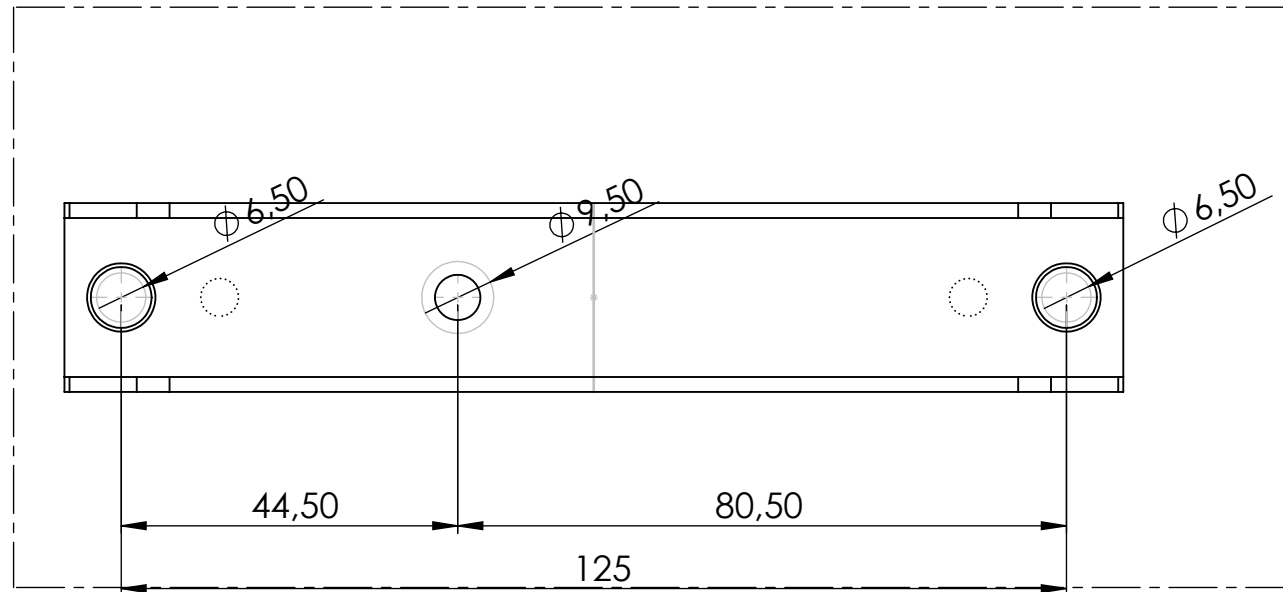

Sublight boreskabelon

Ø6,5 er kun til M6 bolts. Brug skulderskiverne for at undgå at metallerne rør hindanden. Bor for med et lille bor hvis du skal montere med skruer. De 9.5mm er nødvendige for at der er plads til gummi-aflastningen på kablet.

Påfør lim mellem lampe og overfladen inden du fastspænder lampen.

DOBBELTTJEK AT MÅLENE PÅ TEGNINGEN PASSER - det er ikke altid en udskrift passer på målene pga. skalering